


TO ADJUST THE TIME, PRESS THE PLUS OR MINUS BUTTON DIRECTLY ABOVE THE TIME DISPLAY UNTIL IT IS CORRECT



TO ADJUST THE ALARM, PRESS THE PLUS OR MINUS BUTTON DIRECTLY ABOVE THE ALARM DISPLAY. YOU CAN ACTIVATE IT BY PRESSING THE ALARM / SNOOZE BUTTON

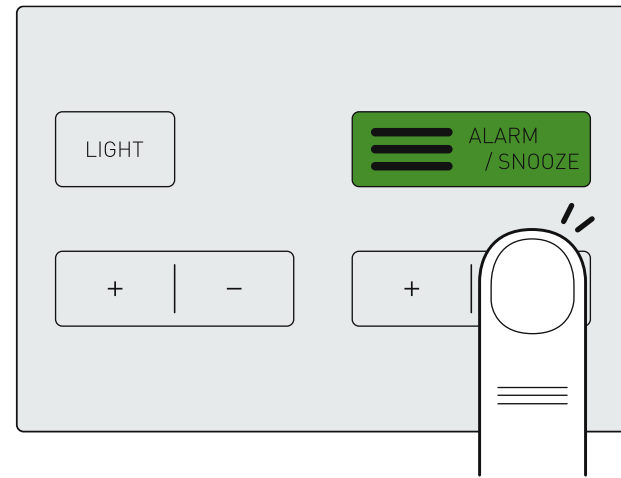